
Correct process for fitting PPE





Put on apron or long-sleeved, preferably fluid-resistant gown

- Apron may be used in situations where physical contact is minimal and there is little chance of body fluid splash.
- Fasten the back of the gown/apron at the neck and waist.

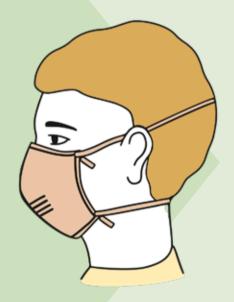




3

Put on P2/N95 respirator

- Secure elastic bands at the middle of the head and neck.
- Fit flexible band to nose bridge.
- Ensure mask is fitted snug to face and below the chin.
- For respirator use, perform a fit check according to manufacturer instructions.
- Please see poster "Principles of Fit Check for P2/ N95 respirator"



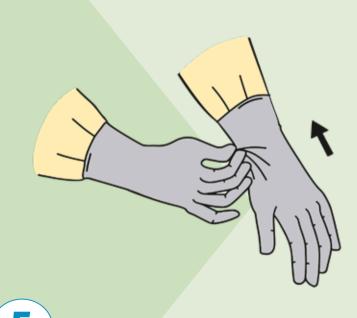


Put on gloves

• Extend to cover wrist of long sleeved gown, if worn.

Correct process for removing PPE



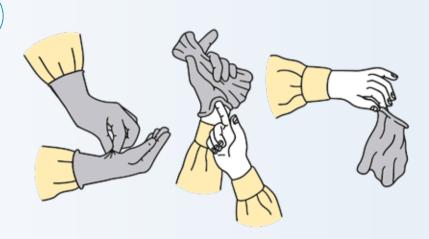

Remove gloves

- The outside of gloves is contaminated.
 Remove gloves being careful not to contaminate bare hands during glove removal
- Discard gloves into waste.



Perform hand hygiene







Remove gown/apron

- The gown sleeves and gown/apron front are contaminated. Untie or break fasteners and pull gown/apron away from body, touching the inside of the gown/apron only.
- Discard gown/apron into waste.



Perform hand hygiene


3





Remove protective eyewear/face shield

- The outside of protective eyewear/face shield is contaminated. Remove eyewear/face shield by tilting the head forward and lifting the head band or ear pieces. Avoid touching the front surface of the eyewear/face shield.
- Reusable items should be placed in a designated receptable for reprocessing.
- Place disposable items into waste.

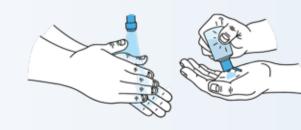


Perform hand hygiene





Remove P2/N95 respirator

- Do not touch the front of the P2/N95 respirator.
- Remove respirator by holding the elastic straps and remove without touching the front.
- Discard P2/N95 respirator into waste.

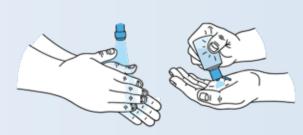

Perform hand hygiene

